

# ***VX2***

User's Manual

Dear users:

Thank you for purchasing VX2, VX2 has been designed and manufactured to meet the highest High Fidelity components to give you the perfect sound.

 
### ***Index***

1,Components guide -----	1
2,Prepair to use -----	3
3,Troubleshooting -----	5
4,Precautions for daily use -----	6
5,Warranty -----	8

---

---

## 1, Component guide

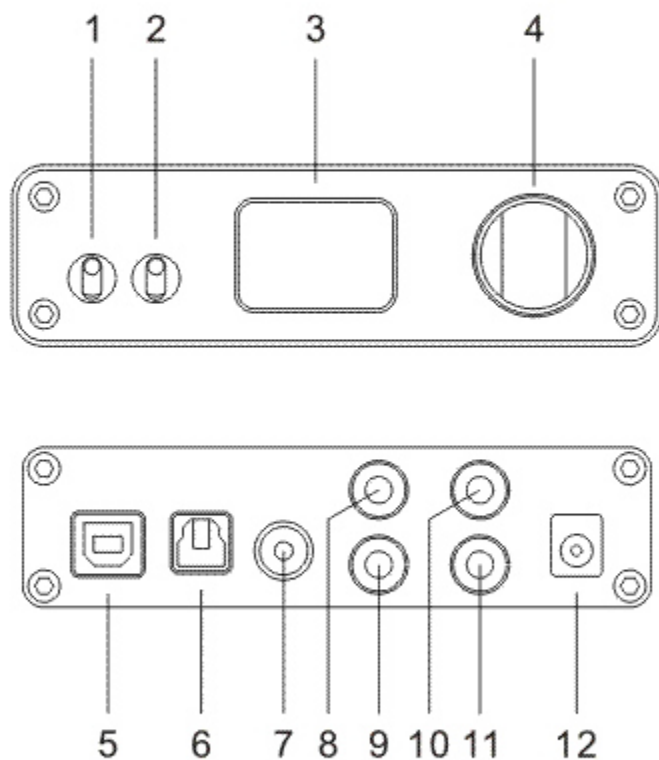

- 1, Power switch.
- 2, Input selector switch.
- 3, LED volume display.
- 4, Volume controller and mega bass switch. Turn it to adjust volume and push it to activate or disable mega bass.
- 5, USB input (up to 24bit/96kHz)
- 6, Optical input (up to 24bit/192kHz)
- 7, Coaxial input (up to 24bit/192kHz)
- 8, R+ output.
- 9, R- output.
- 10, L+ output.
- 11, L- output.
- 12, Power input.

---

## ***2, Prepair to use***

 
VX2 has 3 inputs, you can use the selector switch to select any one of them to enjoy.

Please connect the speaker first, then the adapter and the input cable.


The connection between VX2 and the speaker must be correct. L+ to the red jack(+ in) of the left speaker, L- to the black jack(- in) of the left speaker. Connection to the right channel is the same. Please ensure that step is correct before proceed to the next step.

Correct connection between VX1 and speaker please refer to page 4.


Left channel

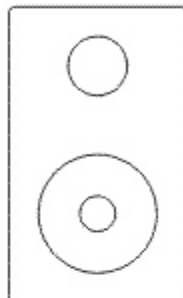


Right channel

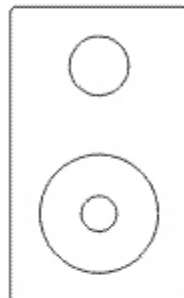 


Front

 


Right channel

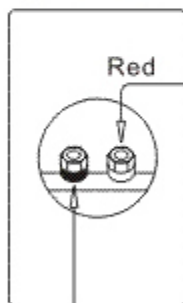 

Back

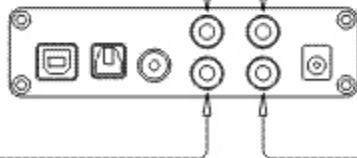 

Left channel

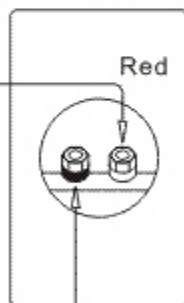 

---

### 3, Troubleshooting

Problem	Probably is...	Solution
Can not boot	No power input	Check power input
Display "—" "—"	unknown signal format	change for correct format
	signal cable loose	check signal cable
	select a wrong input	select to correct input
Sound intermittent	signal cable loose	check signal cable
Unknown USB device	USB cable loose	check USB cable or use another USB port
Sound unusual	speaker cable was not connected correctly	check speaker cable

#### ***4, Precautions for daily use***

4.1, Any connections must refer page 4.

4.2, Ensure the output jack, including speaker L+, L-, R+, R- do not short circuit or connect to ground.

4.3, When you need to connect or disconnect a cable, please turn off VX2 or pull out the power cable first.

4.4, Never pull out the USB cable while connected to a computer and using the audio output.

4.5, You must not keep the amplifier in a hot, humid environment or drop it.

4.6, Opening the case instantly voids the warranty!

4.7, In case where liquid is spilled into the amplifier, turn off the power immediately and check the device inspected by a professional before further use.

---

4.8, Use only the specified AC adapter.

4.9, Maintain the volume so no distortion and will have much better listening experience.

4.10, Indoor use only.

## **5, Warranty**

TOPPING products and accessories are to be free from malfunctions and defects in both materials and workmanship for one year from the date of purchase. Buyer should retain the original dated sales receipt or the warranty card. Proof of the date of purchase or the warranty card will be required with any request for warranty repair.

This warranty is void when failure is due to: damage from water, modification/alteration, unauthorized service, misuse, abuse, use with incompatible accessories, or when failure occurs outside of the one year duration of this warranty.

Please contact the seller for warranty.

Manufacturer warranty is only available in China mainland.